

Amazon Pod Air Vent

Mounting Kit Installation

Important Note

These instructions require the purchase of the Amazon Pod Air Vent Mounting Kit from Upstream Outfitters, as well as a separate purchase of the pod style air registers available at Amazon here: <https://upstream-outfitters.com/qr/850074022282/>


Problems? We can Help!

Just give us a call if you have any questions or need any help, 608-237-1542.

Otherwise, if you need us to see what you are looking in order to help you, send an email to support@upstream-outfitters.com with attached photos.

Step 1

Remove existing registers.

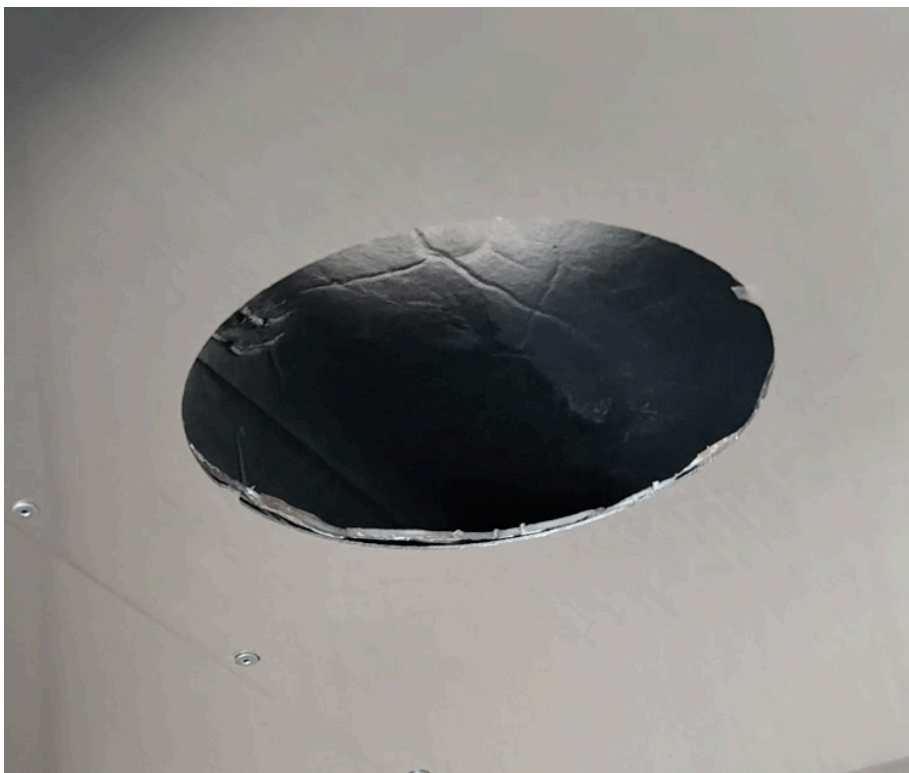

Step 2

Put register into retaining ring, and felt ring on top.



Step 3

Install retaining wings with screws. Do not tighten.



Step 4

Insert assembly into ceiling and tighten screws.

