Airstream Handle Mounting Kit

INSTALLATION

INCLUDED IN THIS KIT

- Replacement Vent Handle (1)
- Short Mounting Blocks (2)
- Long Mounting Blocks (2)
- m3 x 8mm Countersunk Flat Head Screws (2)
- m2 Hex Wrench (1)
- m3 x 12mm socket head screws (2)

REQUIRED TOOLS

- Flat Head Screwdriver
- Snips Or Hacksaw

PROBLEMS? WE CAN HELP!

Just give us a call if you have any questions or need any help, 608-237-1542.

Otherwise, if you need us to see what you are looking in order to help you, send an email to support@upstream-outfitters.com with attached photos.

Step 1

REMOVE OLD HANDLE

BREAK HANDLE

With snips or a hacksaw blade, break/cut the handle.

REMOVE SCREWS

Bend the handle inward to access screws on side, then remove screws.

Step 2

REMOVE FILTER SCREEN

REMOVE SCREWS

Remove the two screws, and save them.

REMOVE COLLAR, THEN SCREEN

Unscrew the black collar on the on/off button, which allows you to remove the screen. Place the collar back on the button so you don't lose it. Note: This is a great time to clean your filter screen.

Step 3
INSTALL FIRST MOUNTING BLOCK

DETERMINE WHICH MOUNTING BLOCKS TO USE

Once you've removed the old handle, and with your exhaust vent closed, note the distance to your roofline on each side of the handle to determine which lengths of mounting blocks you'll need to use. Depending on your setup and how you want the handle situated, you may end up needing to use two short mounting blocks, one short and one long, or two long mounting blocks.

INSTALL FIRST BLOCK

If you determined you'll need one long and one short mounting block, install a long block first. Bend handle mounting strap away from wall and sneak in small screw.

TIGHTEN BLOCK

Hold screw in with finger and spin on mounting block until snug. Position with handle mounting hole facing downward, and tighten with Allen wrench.

Step 4

REINSTALL BUTTON AND SCREEN

REINSTALL ON/OFF BUTTON

First, reinstall the on/off button.

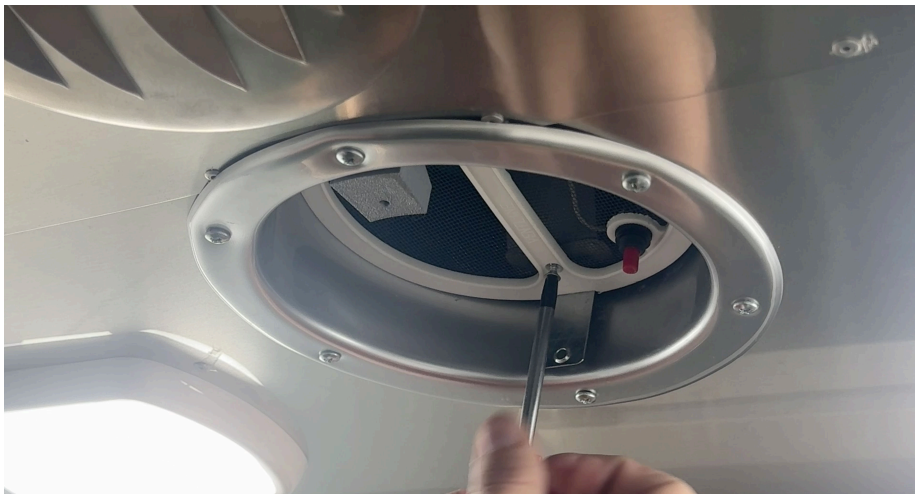

REINSTALL SCREEN

Then, using the screws you saved from Step 2, reinstall the screen.

Step 5

INSTALL SECOND MOUNTING BLOCK AND HANDLE

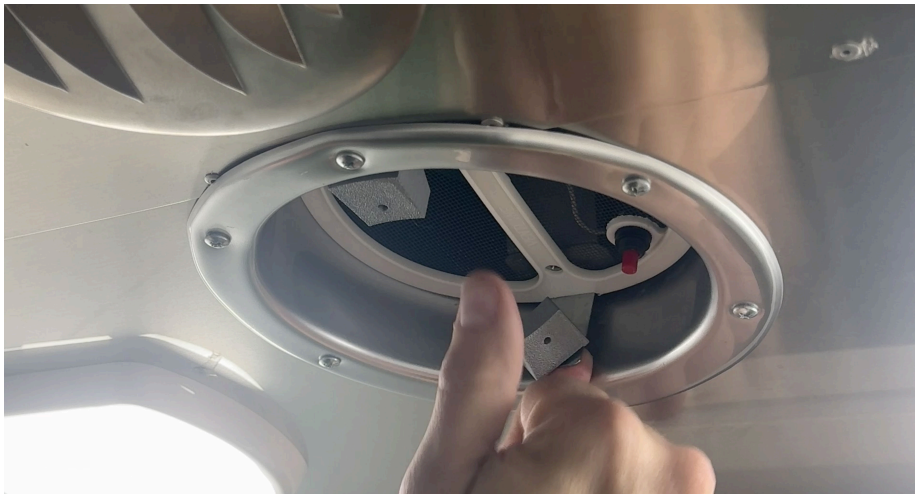

INSTALL MOUNTING BLOCK

Use the same technique you previously used to install the second mounting block. You may have to bend the metal further to get access to tighten.

INSTALL HANDLE

Using the socket cap screws, install the new handle by connecting it to the mounting block.

Enjoy!